



Working Radius (m)	All Directions		
	9,5 m boom	16,5 m boom	23,5 m boom
3.0	16.00		
3.5	11.50		
3.8	10.00	10.00	
4.0	9.00	9.00	
4.5	7.50	7.50	
5.0	6.30	6.30	
5.5	5.50	5.50	5.50
6.0	4.80	4.80	4.80
6.5	4.20	4.20	4.20
7.0	3.70	3.70	3.70
8.0	3.00	3.00	3.00
9.0		2.50	2.50
10.0		2.05	2.05
12.0		1.40	1.40
14.0		1.00	1.00
16.0			0.75
18.5			0.50

Boom Angle (Degree)	Working Radius (m)	All Directions
		Jib Work
73	10.0	2.0
70	11.4	1.70
65	13.8	1.20
60	16.0	0.80
55	18.1	0.55
52	19.5	0.35

**EDINS**  
08-36 96 00

**KATO 16 ton**

